
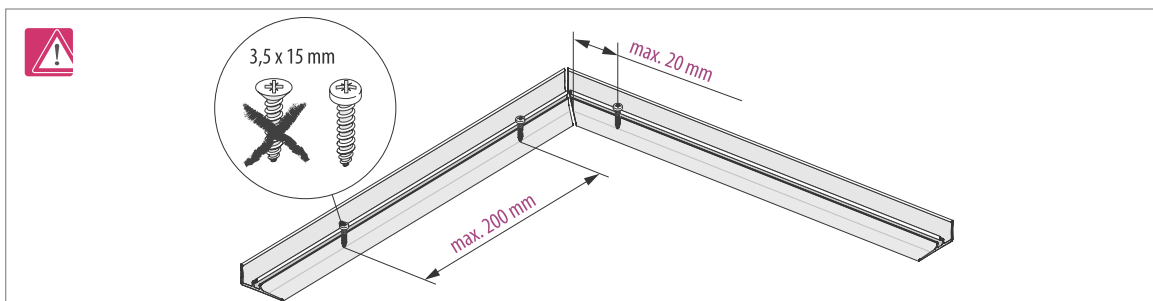
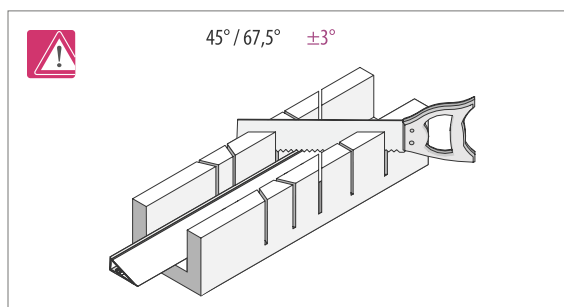
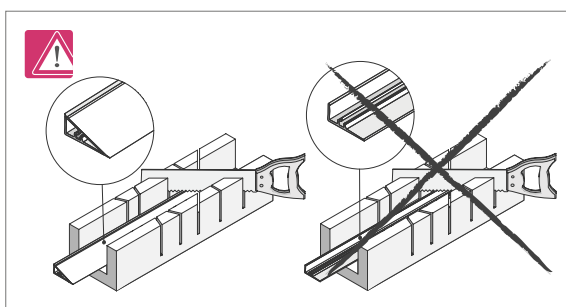
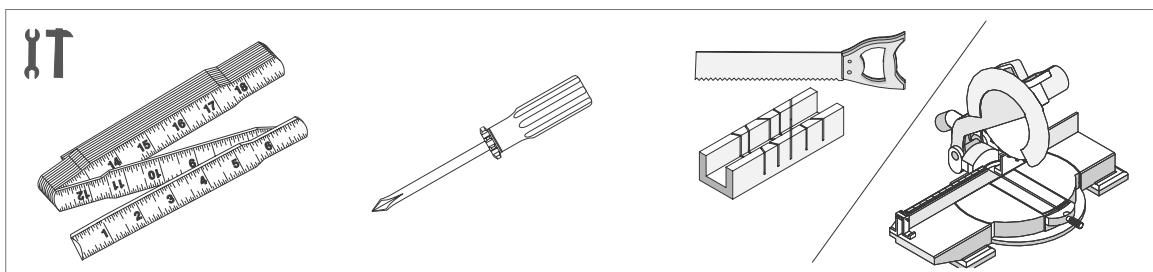
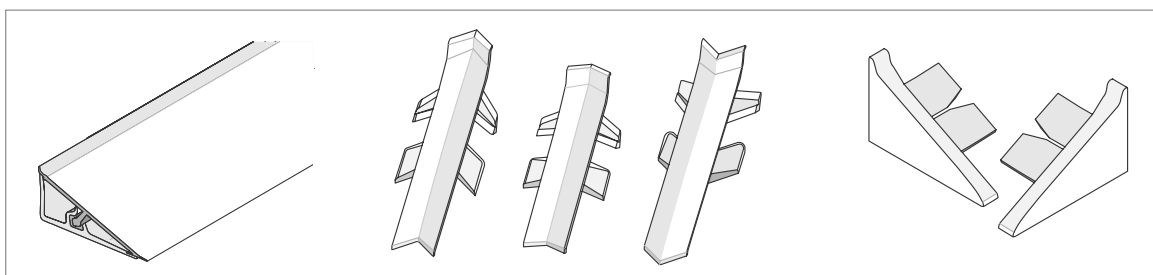


Perfetto line








Монтаж

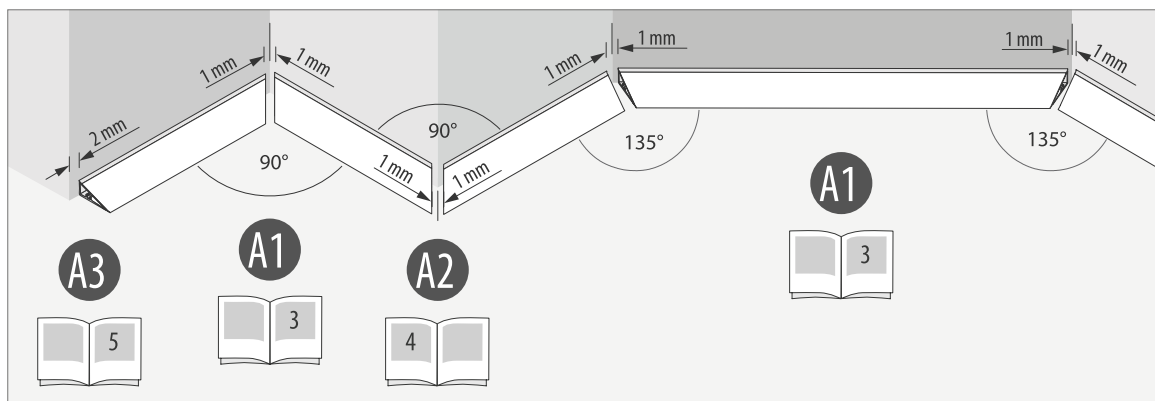

Perfetto line

Монтаж








A1

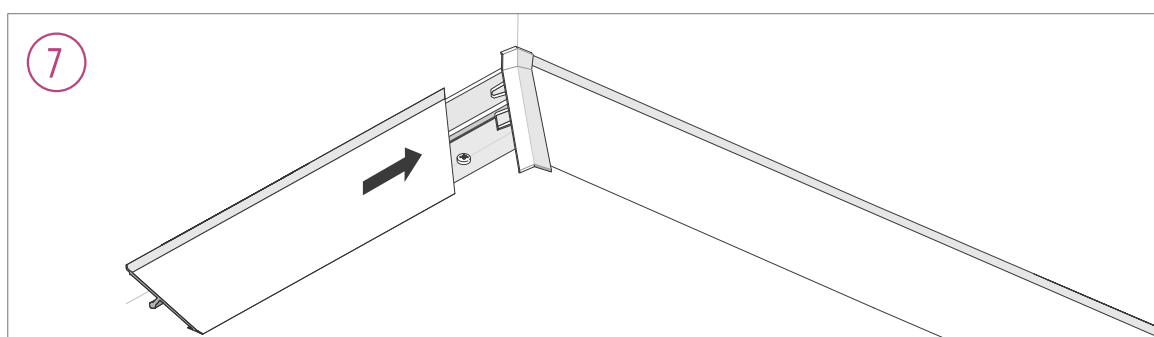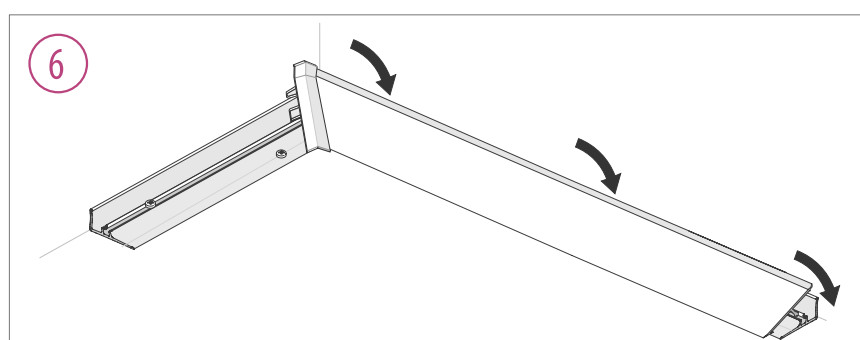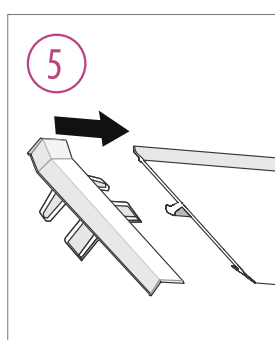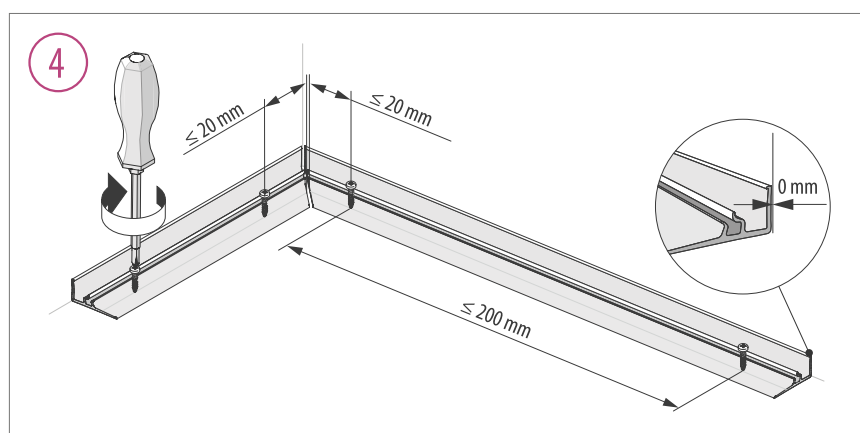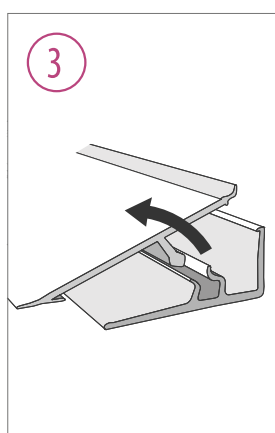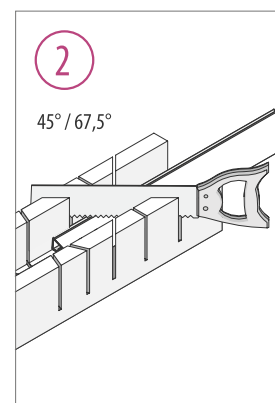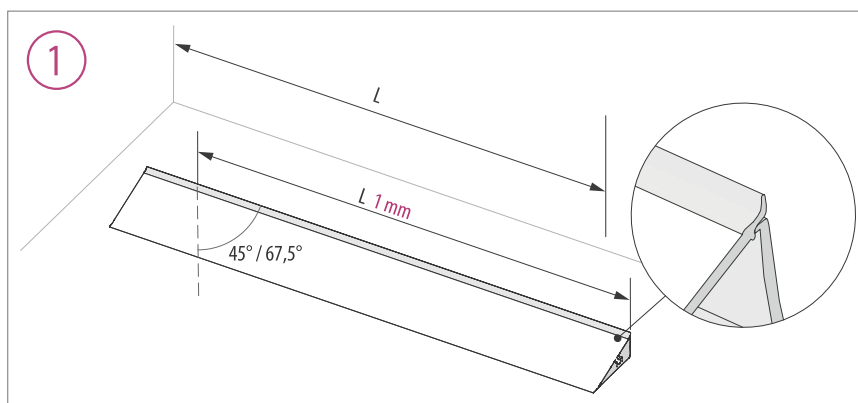

Perfetto line

Монтаж

A2

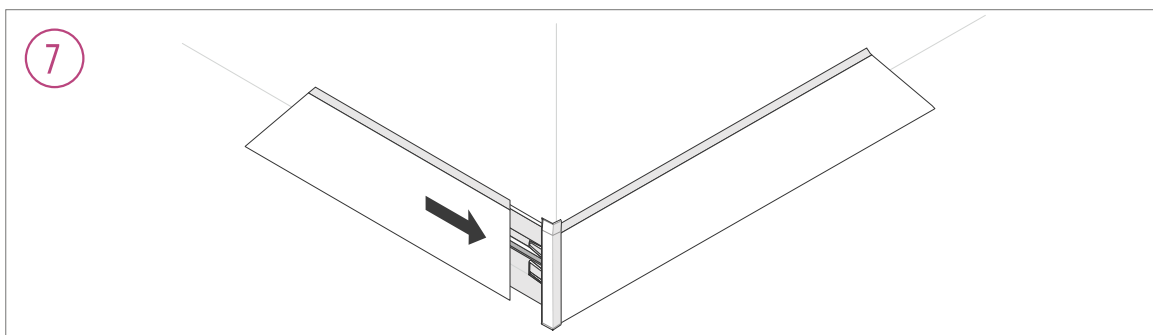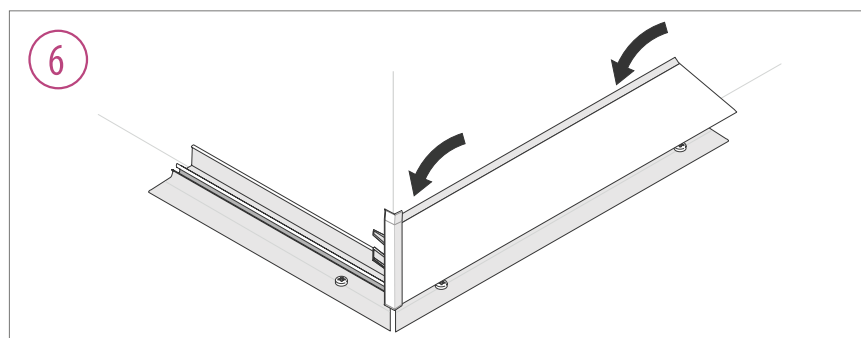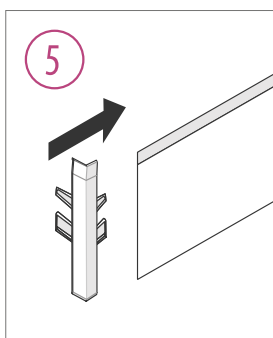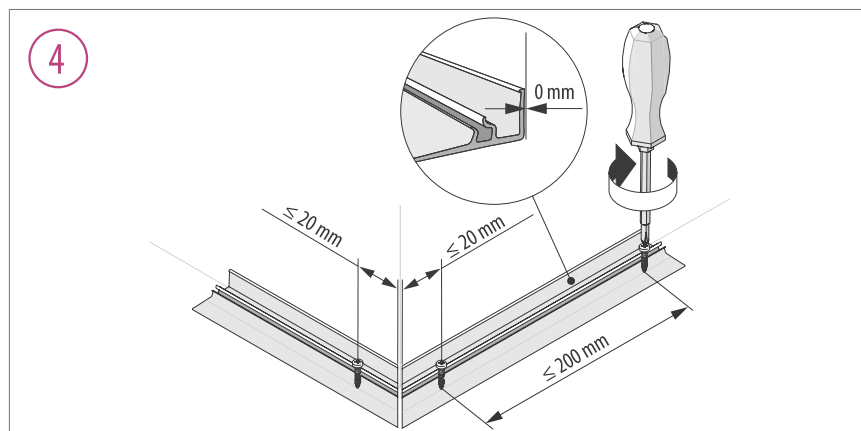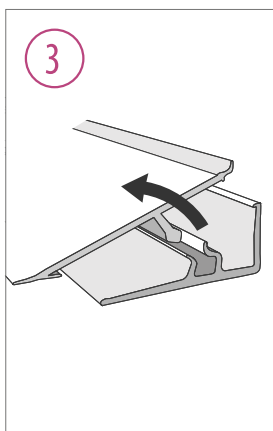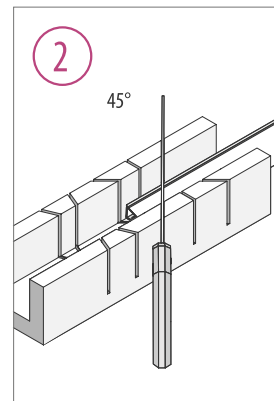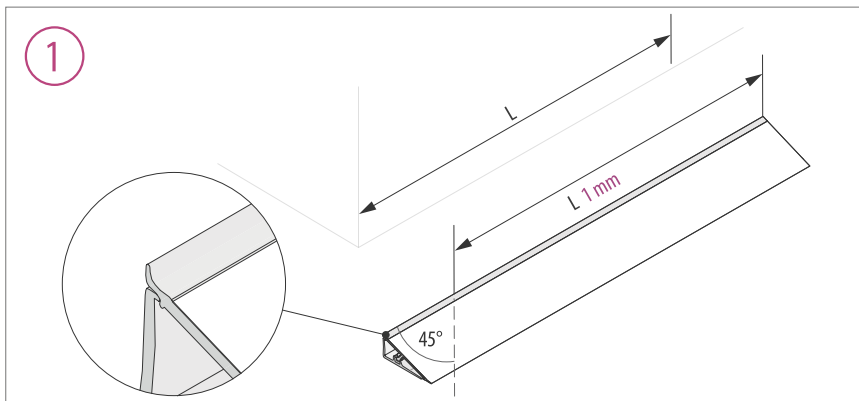

Perfetto line

Монтаж

A3

